

VIN XXXXXXX

Vehicle X1F48/off-road vehicle/X1 xDrive28i/B46/AUTO/US/LL/2016/08

FUB-HIL-HI-0006-A11 - Oil level measurement - V.6

Result of the measurement	Oil quantity up to MAX
Oil level below minimum: Top up with 1 litre of oil. Then repeat the measurement, more oil may possibly need to be added.	more than 1.3 litres
Oil level at minimum: Top up with 1 litre of oil.	approx. 1,2 litres
Oil level OK: 1/4 above minimum. Topping up oil not necessary.	approx. 0,9 litres
Oil level OK: 1/2 above minimum. Topping up oil not necessary.	approx. 0,7 litres
Oil level OK: 3/4 above minimum. Topping up oil not necessary.	approx. 0.4 litres
Oil level OK: at maximum. Do not top up oil Attention: The sensor does not identify overfilling!	

Prerequisites for oil level measurement:

- Oil temperature at operating temperature.
- Engine at idle or driving.
- the result is available after one minute if the measurement is started manually (see Owner's Handbook)
- while driving, the result will take at least 20 minutes (depending on driving style)