

51 16 080 Removing and installing or replacing sun visor and left or right counter support



NOTICE


Description is for left component only. Procedure on the right side is identical.

1 – Remove the sun visor and the counter support




NOTICE


Schematic diagram is for example purposes. Some parts may differ in certain details.

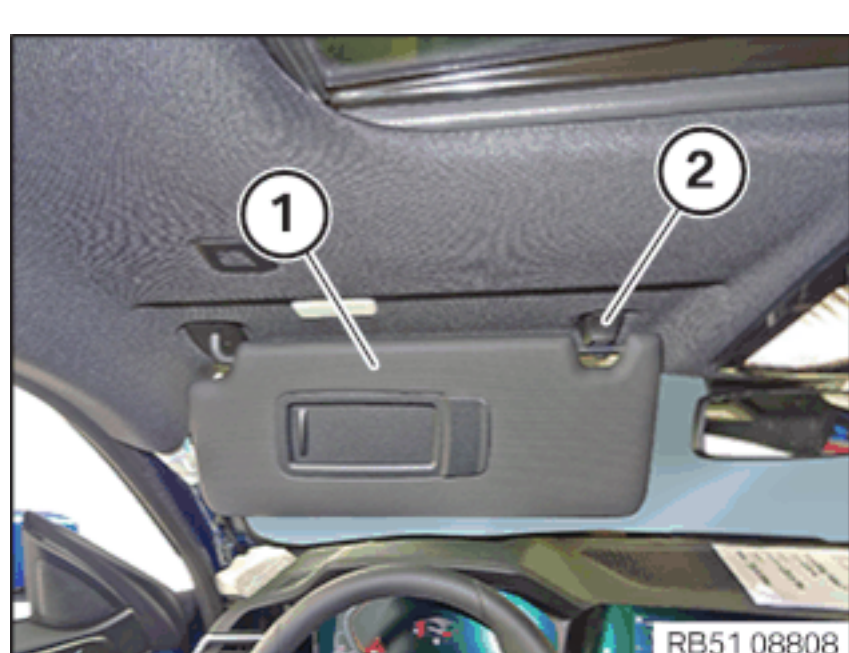

- Detach sun visors (1) from end support (2) and swivel to the side.

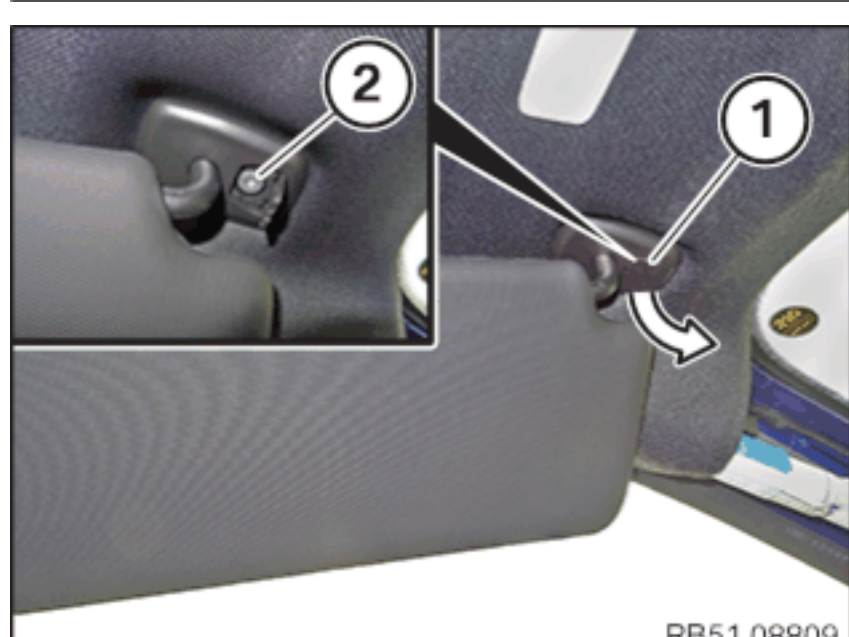

- Fold the cover (1) up in direction of arrow.
- Loosen screw (2).
- Remove sun visor and unlock and disconnect the associated plug connection.

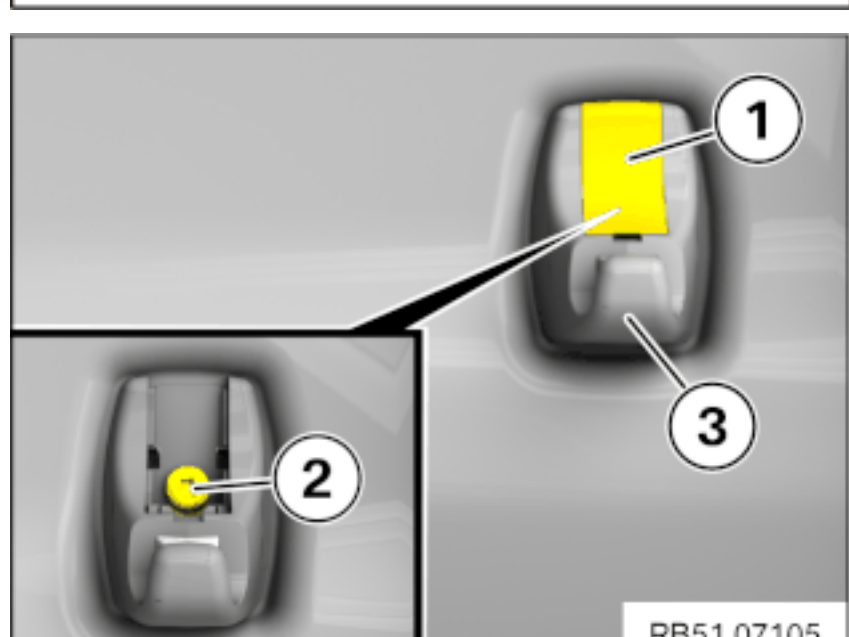


- Unclip the cover (1) with a suitable tool.
- Release screw (2) and pull the counter support (3) out of the headlining.

2 – Install the sun visor and the counter support




NOTICE

Schematic diagram is for example purposes. Some parts may differ in certain details.

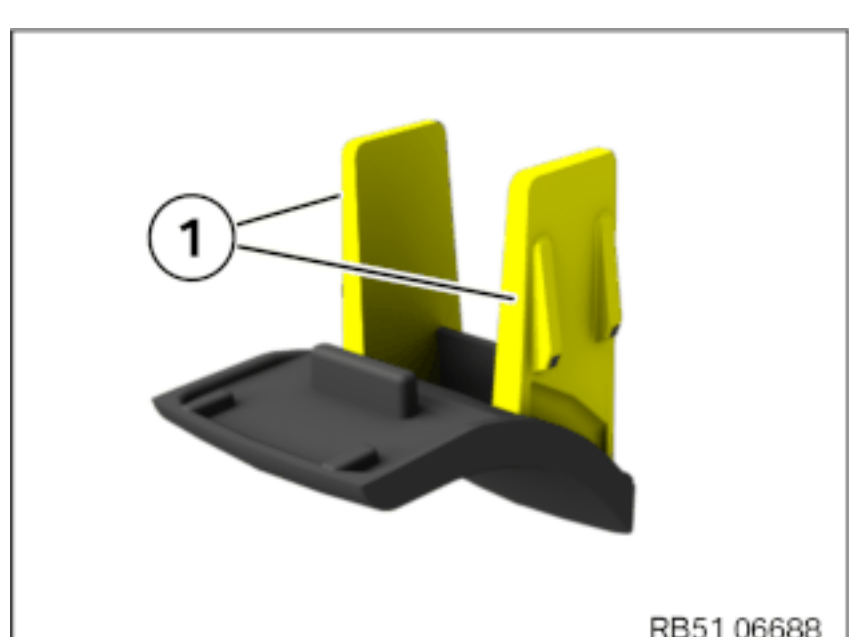

- Check guides (1) on the cover of the end support for damage and, if necessary, renew them.

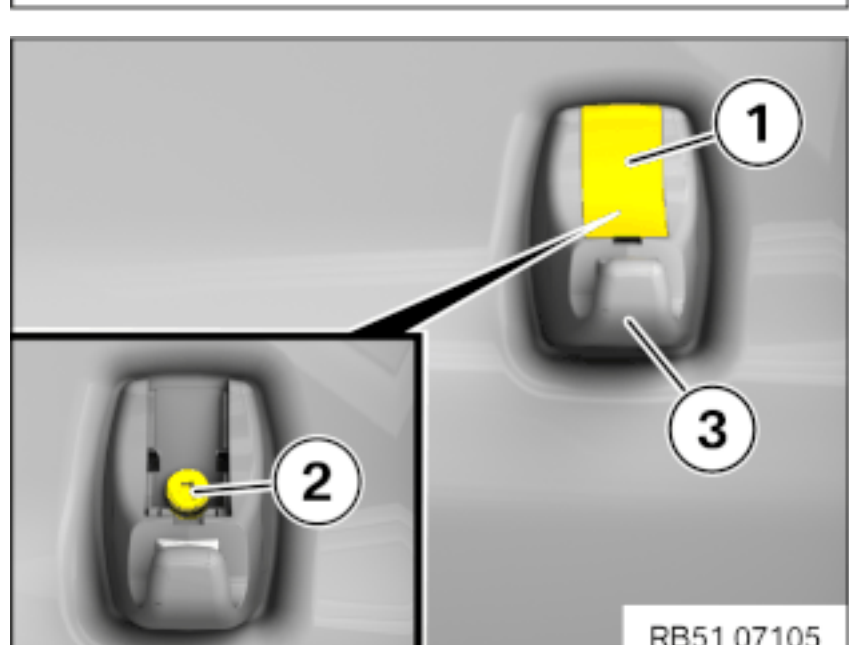

- Correct position the counter support (3) in the headlining.
- Tighten down screw (2).

End support to mounting


4.2x13 self tapping screw		Tightening torque	1,9 Nm
---------------------------	--	-------------------	--------

- Clip in the cover (1).
- Connect and lock corresponding connectors.
- Install the sun visors.
- Tighten down screw (2).

Sun visor to body

Screw		Tightening torque	3.3 Nm
-------	--	-------------------	--------

- Close the cover (1).
- Hook the sun visors (1) to the end support (2).

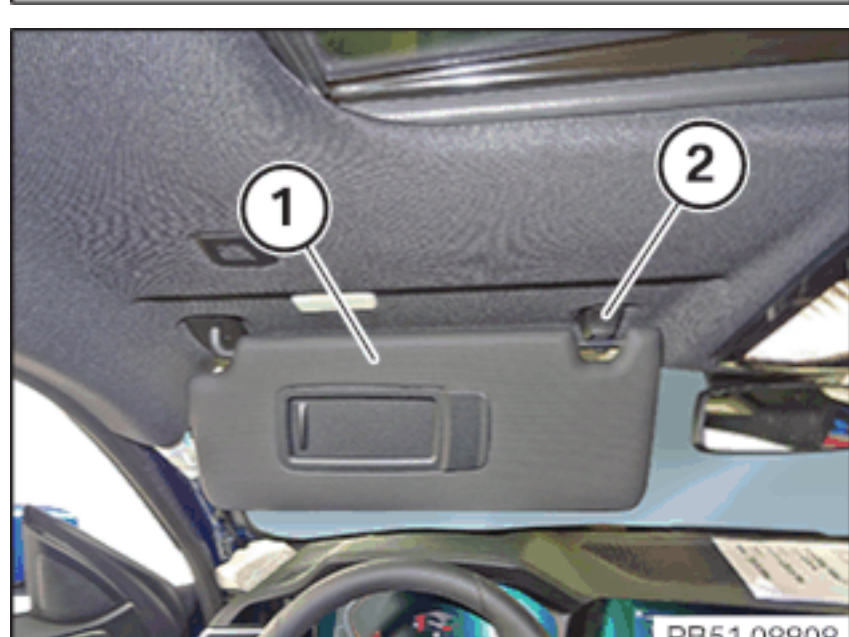

Additional Information

Overview of Tightening Torques

End support to mounting

Used in step 2

4.2x13 self tapping screw		Tightening torque	1,9 Nm
---------------------------	--	-------------------	--------

Sun visor to body

Used in step 2

Screw		Tightening torque	3.3 Nm
-------	--	-------------------	--------