

## **Adding Luxury Line Trim to 2014 Basic 328i**

**Front Bumper.** Ordered these BMW parts (the item numbers in parenthesis comes from the front end trim parts diagram on last page):

- **5111 727 9700**, center chrome rod (item 1)
- **5111 727 9697**, L air intake “whisker” (item 4)
- **5111 727 9698**, R air intake
- **5111 728 1917**, L lower grille (item 6)
- **5111 728 1918**, R lower grille

Please bear in mind that the car comes with 5111 725 369 & 5111 725 370 (item 5); I goofed and ordered these so I had to return them and get the correct items.

To install the center chrome rod since car is basic line, there are no slots for the “ears” on the back side so I broke these off and used some DuPont heavy duty two-sided tape to affix to front bumper (after cleaning it down with alcohol wipe).

**Before.**



Unfortunately, I could not figure out how to get the Luxury “whiskers” to fit so I did not install them, but did put on center chrome rod.

**After.**



**Rear Bumper.** Ordered BMW part **5112 728 9755**. Since car is basic line, there are no slots for the “ears” that are on the back side of the rear bumper trim. I broke off these ears and used some DuPont heavy duty two-sided tape to affix to the correct location on the rear bumper.

**Before**




**After**





## 328i Front End Trim

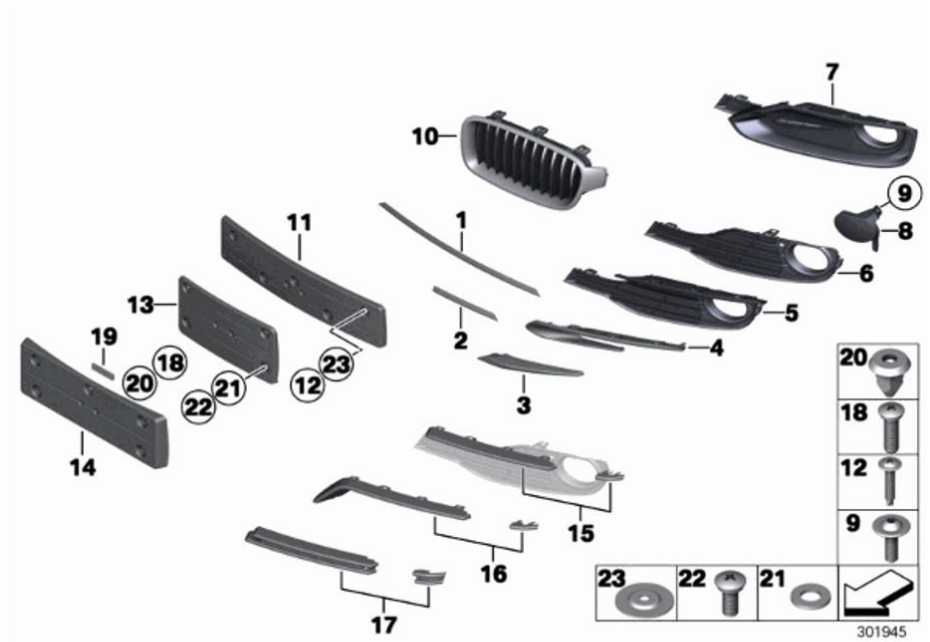

### Parts List

- 1. Chrome Center Rod
- 4. Intake Finisher ("Whisker")
- 5. Lower Intake Grille (correct picture, BUT part number yields 6)
- 6. Lower Intake Grille (correct picture, BUT part number yields 5)