


BMW F80 M3 Sedan / Repair Manuals and Technical Data / 51 Body equipment / 51 43 Side Trim Panel with Armrests /

## 51 43 251 Removing and installing or replacing trim panel for left or right rear roof pillar (C-pillar)

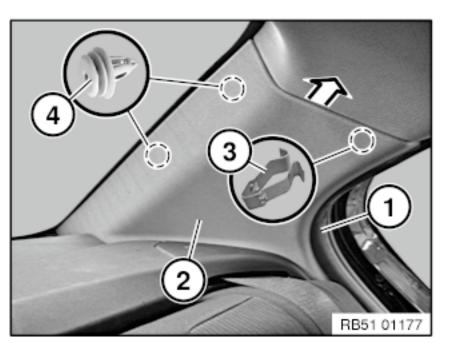

Detach edge protection (1) in area of trim panel (2).

Release trim panel (2) from first detent position of clamp (3).


Release trim panel (2) from upper clip (4).

Pull off trim panel (2) in direction of arrow, with lower clip (4) remaining on the C-pillar.

## Installation note:

Lever out clip (4) remaining in C-pillar and insert in trim panel (2).

Make sure <u>edge protection</u> (1) is correctly seated on trim panel (2).

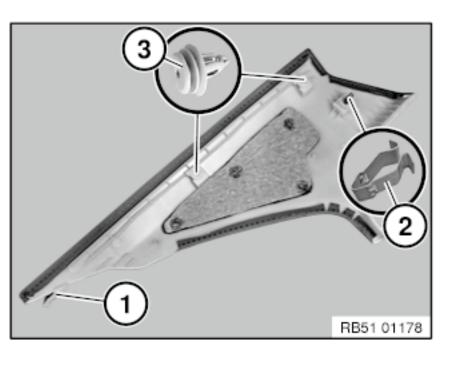

## Installation note:

Guide (1) must not be missing or damaged.

Replace faulty clamp (2) and clip (3).

Check that clamp (2) is securely seated in trim panel, replace if necessary.

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. Newtis.info and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.