



- FL+ = Front Left Positive
 WL- = Woofer Left Negative
 FR+ = Front Right Positive
 WR- = Woofer Right Negative
 C- = Center Negative
 RL+ = Rear Left Positive
 RR+ = Rear Right Positive
 RSR+ = Rear Side Right Positive
 RSL- = Rear Side Left Negative

FL- = Front Left Negative
 WL+ = Woofer Left Positive
 FR- = Front Right Negative
 WR+ = Woofer Right Positive
 C+ = Center Positive
 RL- = Rear Left Negative
 RR- = Rear Right Negative
 RSR- = Rear Side Right Negative
 RSL+ = Rear Side Left Positive

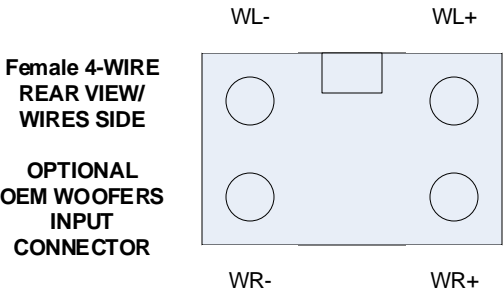

Connector A

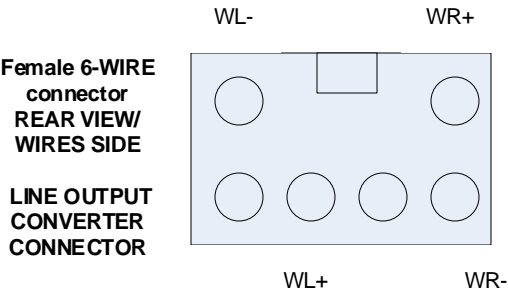

Connector B



Powering Underseat Woofers with Aftermarket Amp =
 Plug Connector A to Harness Male Jack #1

Powering Underseat Woofers with OEM amp =
 Plug Harness Male Jack 1 to Harness Female Socket 2

Line Output Converter (LOC) = Plug Connector B to Harness Male Jack 3

Required LOC for 677 systems = **70W/ch**
 Required LOC for 688, Bang & Olufsen and Individual Audio = **150W/ch**

Note: If Audiocontrol LC2i active LOC is used then AccuBASS must be disabled.